

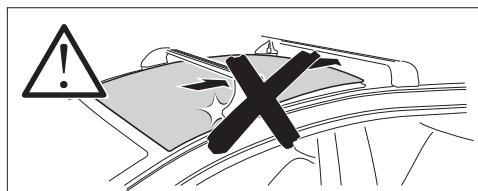
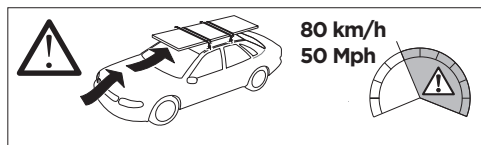


1




Kit 187209 VOLKSWAGEN Multivan (T7), 5-dr MPV, 22-

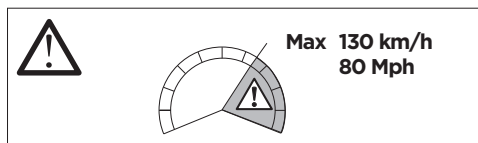

ISO 11154-E

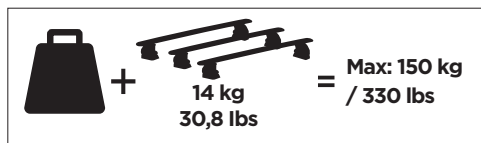







This kit is only for vehicles with fixpoint mounting.

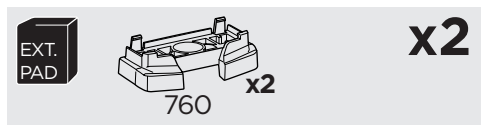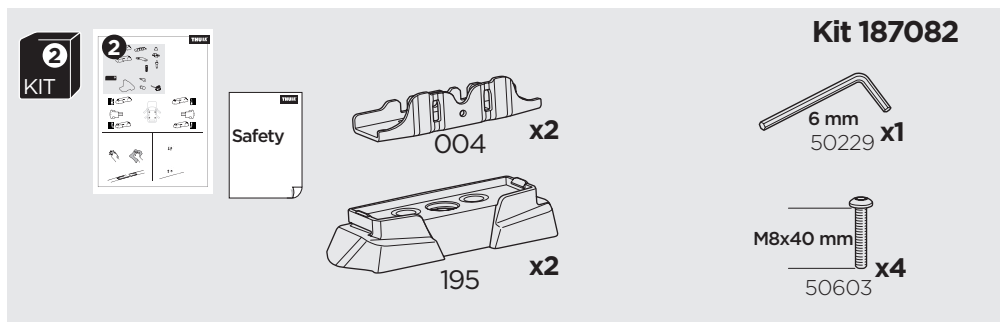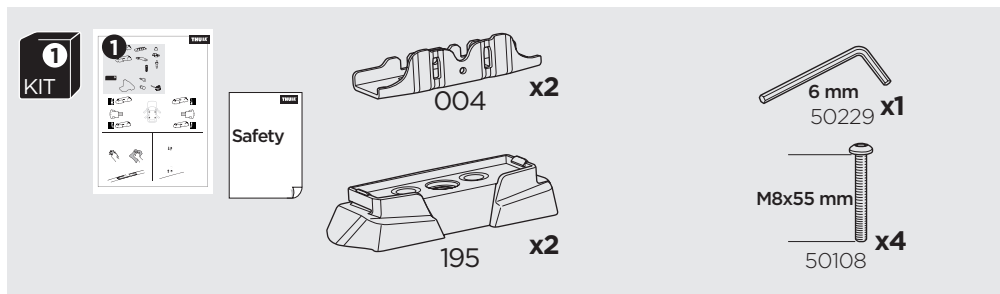


Bring your life
thule.com

5565171001


i

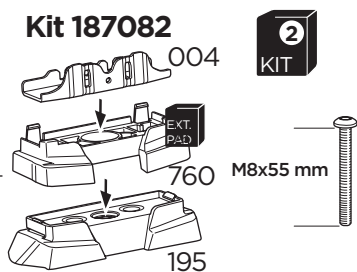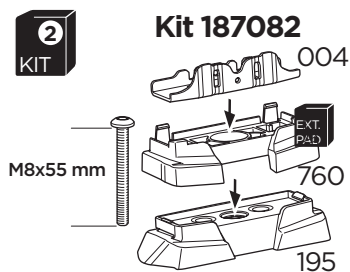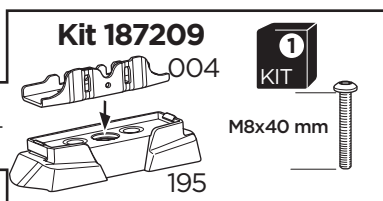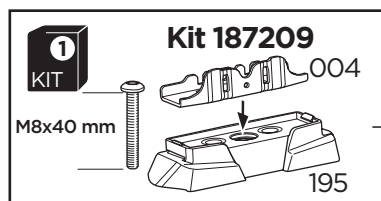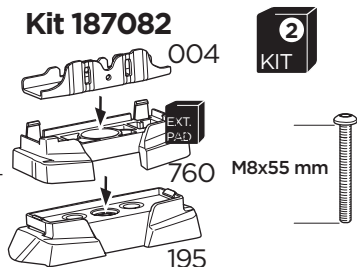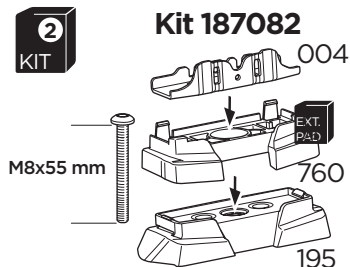


1 **A**

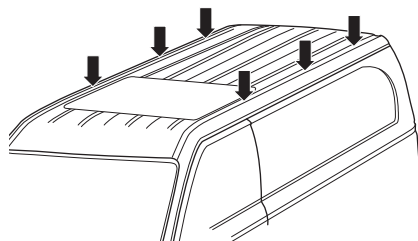



B

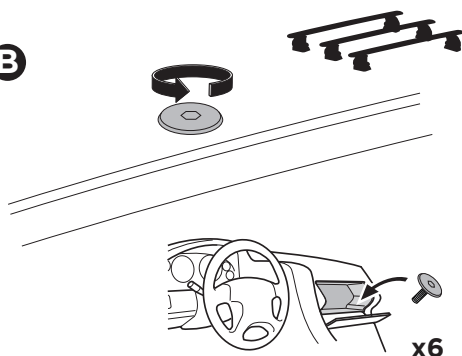


2






8 Nm

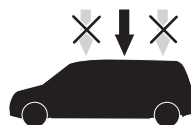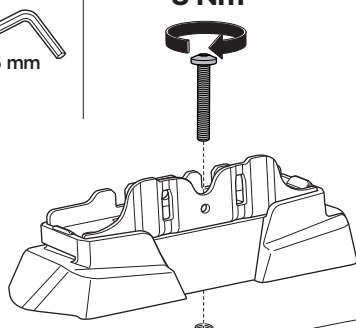

3

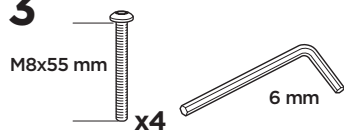


8 Nm

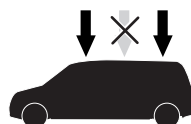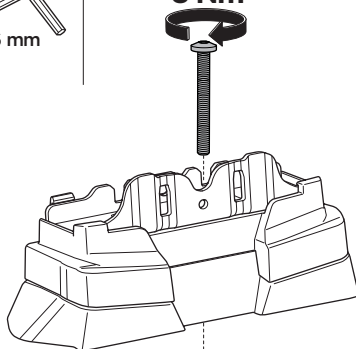

i



A

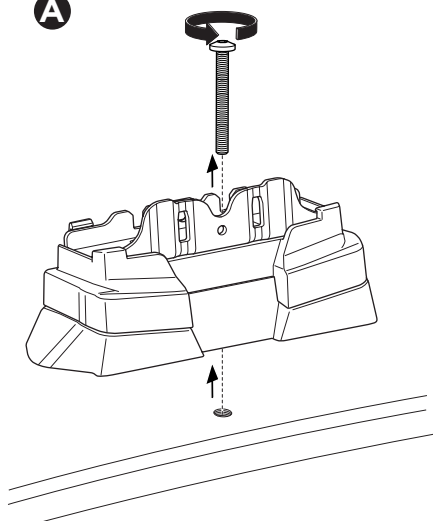

B

